

This guide will explain how to replace the track pad in the Dell XPS 13 9350.

Written By: Arvind Krish



INTRODUCTION

Use this guide to replace the track pad in the Dell XPS 9350.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [#1 Phillips Head Screwdriver](#) (1)
-

Step 1 — Back Cover




- Remove the eight 4 mm T5 Torx screws from the bottom cover.

Step 2





- Lift up the back cover using both hands.

Step 3 — Battery

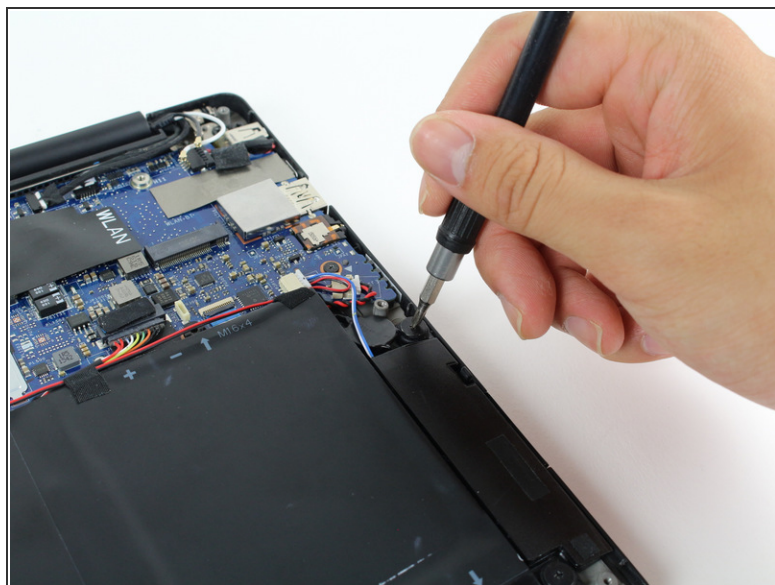


- Remove the four 3 mm Phillips #0 screws located on each corner of the battery.

Step 4

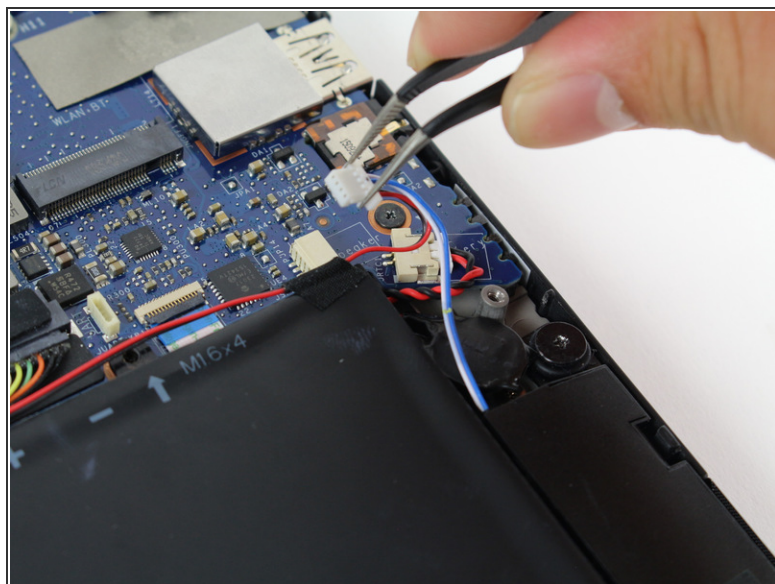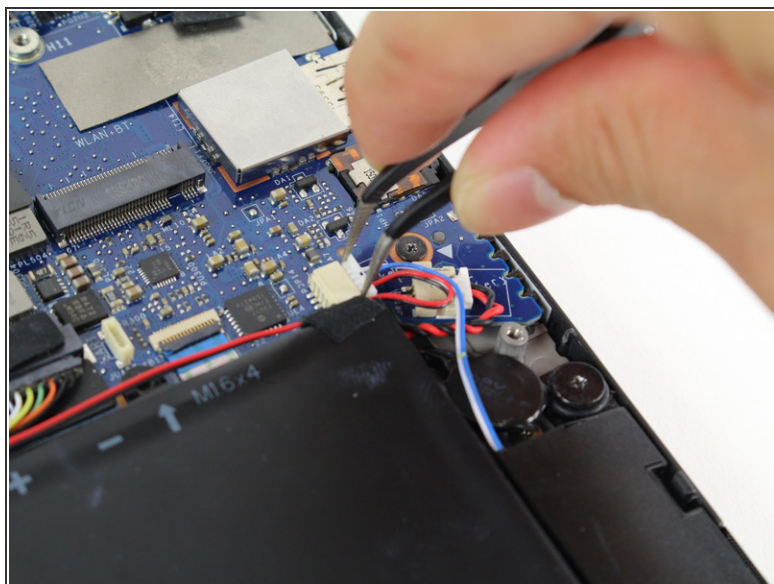

- Use tweezers to remove the white connector from its socket by pulling it to the right.

Step 5

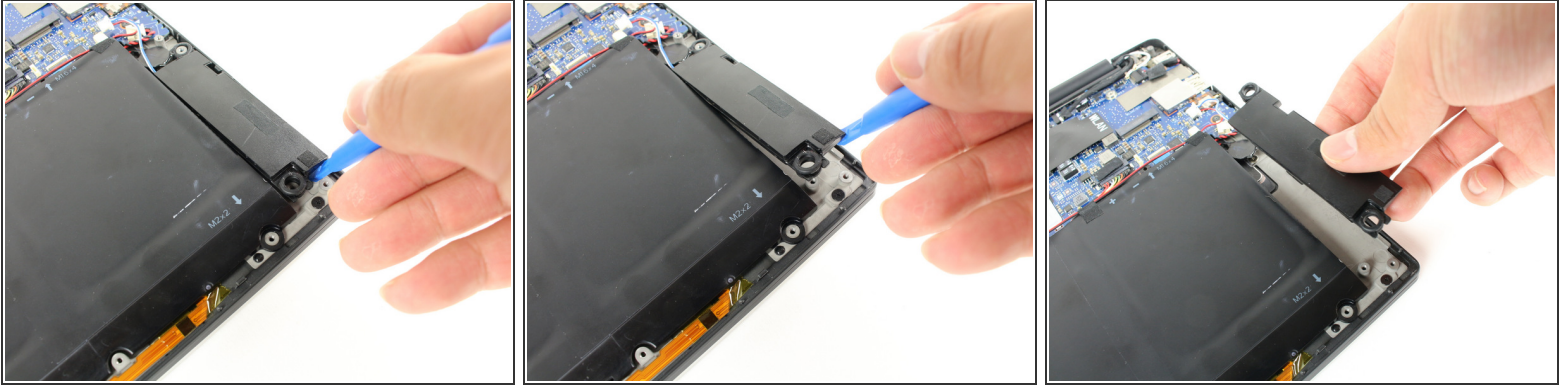

- Place a plastic opening tool underneath one side of the speaker and lift up.
- ❗ There are speakers located to the left and to the right of the battery.
- Use your hand to lift up the speaker.

Step 6




- Use tweezers to detach the rainbow cable connector from its socket by pulling it towards the battery.

Step 7




- Use your hands to gently lift up the battery.

Step 8 — Track Pad

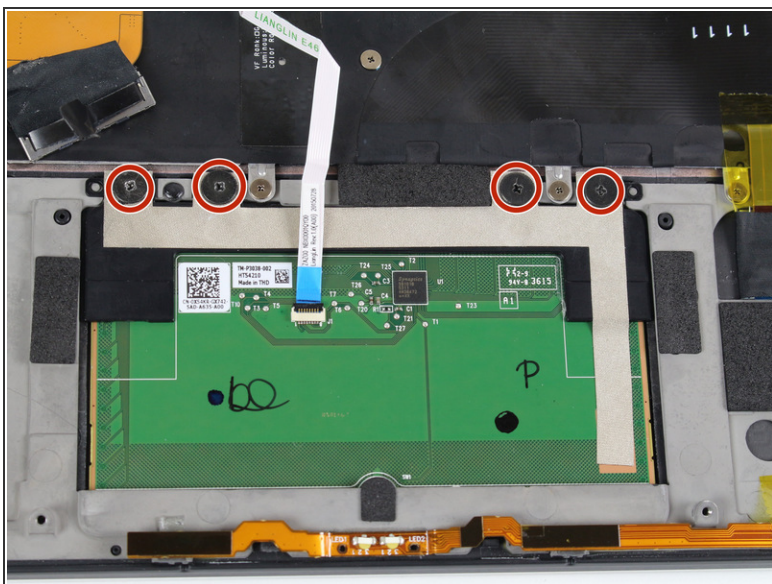

- Remove the four 3 mm Phillips #1 screws from the trackpad.

Step 9

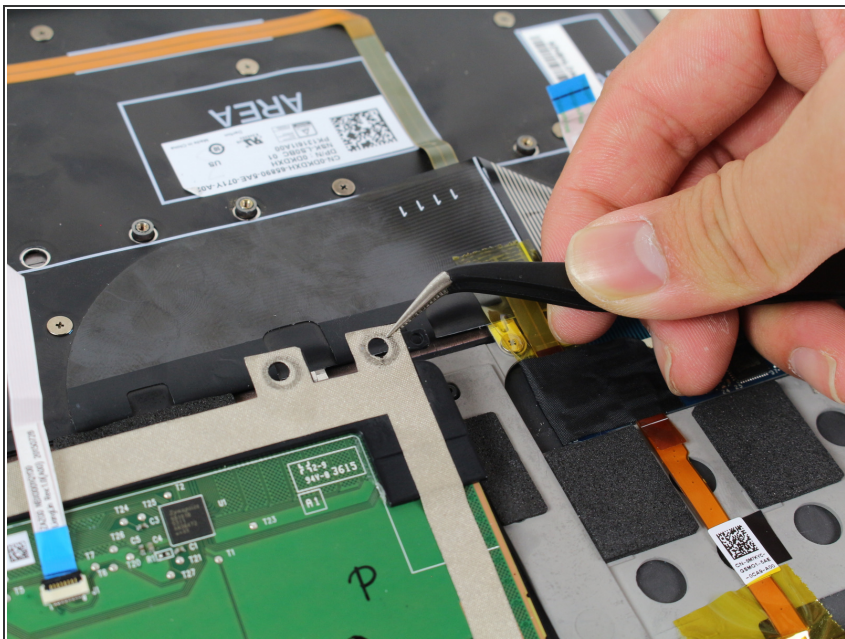

- Use tweezers to gently lift the upper-right corner of the track pad.
- Remove the track pad by slowly pulling it up and away from you.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-16 04:41:52 PM.